

# DSC-W55

## SERVICE MANUAL

**LEVEL 1**

Ver. 1.2 2007.06

Revision History



Photo: Silver

*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Hong Kong Model  
Chinese Model  
Korea Model  
Argentine Model  
Brazilian Model  
Tourist Model*

### Link

[SPECIFICATIONS](#)

[ACCESSORIES](#)

[INSTRUCTION MANUAL](#)

[SERVICE NOTE](#)

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**DIGITAL STILL CAMERA**

**SONY**<sup>®</sup>



Cyber-shot



## SPECIFICATIONS

### Camera

#### [System]

Image device: 7.20 mm (1/2.5 type) color CCD,  
Primary color filter

Total pixel number of camera:

Approx. 7 410 000 pixels

Effective pixel number of camera:

Approx. 7 201 000 pixels

Lens: Carl Zeiss Vario-Tessar 3× zoom lens f =  
6.3 – 18.9 mm (38 – 114 mm when converted  
to a 35 mm still camera) F2.8 – 5.2

Exposure control: Automatic exposure, Scene  
Selection (7 modes)

White balance: Automatic, Daylight, Cloudy,  
Fluorescent, Incandescent, Flash

File format (DCF compliant):

Still images: Exif Ver. 2.21 JPEG compliant,  
DPOF compatible

Movies: MPEG1 compliant (Monaural)

Recording media: Internal Memory (approx.

56 MB), "Memory Stick Duo"

Flash: Flash range (ISO sensitivity  
(Recommended Exposure Index) set to Auto):  
approx. 0.2 to 3.9 m (7 7/8 inches to 12 feet  
9 5/8 inches) (W)/approx. 0.3 to 2.0 m (11 7/8  
inches to 6 feet 6 3/4 inches) (T)

#### [Input and Output connectors]

Multi connector: Video, Audio (Monaural), USB  
communication

USB communication: Hi-Speed USB (USB 2.0  
compliant)

#### [LCD screen]

LCD panel: 6.2 cm (2.5 type) TFT drive

Total number of dots: 115 200 (480 × 240) dots

#### [Power, general]

Power: Rechargeable battery pack NP-BG1, 3.6 V

AC-LS5K AC Adaptor (not supplied), 4.2 V

Power consumption (during shooting with the  
LCD screen on):  
1.0 W

Operating temperature: 0 to 40 °C (32 to 104 °F)

Storage temperature: –20 to +60 °C (–4 to +140 °F)

Dimensions:

88.9 × 57.1 × 22.9 mm (3 1/2 × 2 1/4 × 29/32  
inches) (W/H/D, excluding protrusions)

Mass:

Approx. 147 g (5.2 oz) (including NP-BG1  
battery pack and wrist strap, Etc.)

Microphone: Monaural

Speaker: Monaural

Exif Print: Compatible

PRINT Image Matching III: Compatible

PictBridge: Compatible

#### BC-CSG/BC-CSGB/BC-CSGC battery charger

Power requirements: AC 100 to 240 V, 50/60 Hz,  
2 W (BC-CSG/BC-CSGC) 2.6 W (BC-CSGB)

Output voltage: DC 4.2 V, 0.25 A

Operating temperature: 0 to 40 °C (32 to 104 °F)

Storage temperature: –20 to +60 °C (–4 to +140 °F)

Dimensions: Approx. 62 × 24 × 91 mm (2 1/2 ×  
31/32 × 3 5/8 inches) (W/H/D)

Mass: Approx. 75 g (2.7 oz)

#### Rechargeable battery pack NP-BG1

Used battery: Lithium-ion battery

Maximum voltage: DC 4.2 V

Nominal voltage: DC 3.6 V

Capacity: 3.4 Wh (960 mAh)

Design and specifications are subject to change  
without notice.

#### **SAFETY-RELATED COMPONENT WARNING!!**

**COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.**

#### **ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**

**LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.**

### **SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.


1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

# SERVICE NOTE

## Description on Self-diagnosis Display

### Self-diagnosis display

The camera has a self-diagnosis display. This function displays the camera condition with five-digits (a combination of a letter and figures) on the LCD screen. If this occurs check the following code chart. The five-digits display informs you of the camera's current condition. The last two digits (indicated by □□) will differ depending on the state of the camera.

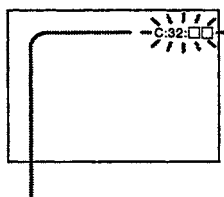

#### Self-diagnosis display

- C: □□: □□

You can reverse the camera malfunction yourself. (However, contact your Sony dealer or local authorized Sony service facility when you cannot recover from the camera malfunction.)

- E: □□: □□

Contact your Sony dealer or local authorized Sony service facility.

Display Code	Countermeasure	Cause	Caution Display During Error
C:32:□□	Turn the power off and on again.	Trouble with hardware.	SYSTEM ERROR
C:13:□□	Format the "Memory Stick" or internal memory.	"Memory Stick" or internal memory is unformatted.	FORMAT ERROR
	Insert a new "Memory Stick".	"Memory Stick" is broken.	MEMORY STICK ERROR
	Turn the power off and on again.	Trouble with internal memory.	INTERNAL MEMORY ERROR
E:61:□□	Checking of lens drive circuit.	When failed in the focus and zoom initialization.	—
E:91:□□	Checking of flash unit or replacement of flash unit.	Abnormality when flash is being charged.	


## Method for Copying the Data in Internal Memory

The data can be copied by the operations on the Setup screen.

### Copy

Copies all images in the internal memory to a "Memory Stick Duo".

- ① Insert a "Memory Stick Duo" having 64 MB or larger capacity.
- ② Select [OK] with ▲ on the control button, then press ●.  
The message "All data in internal memory will be copied Ready?" appears.
- ③ Select [OK] with ▲, then press ●.  
Copying starts.

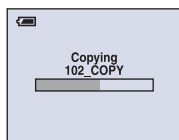

#### To cancel the copying

Select [Cancel] in step ② or ③, then press ●.

- Use a fully charged battery pack. If you attempt to copy image files using a battery pack with little remaining charge, the battery pack may run out, causing copying to fail or possibly corrupting the data.
- You cannot copy individual images.
- The original images in the internal memory are retained even after copying. To delete the contents of the internal memory, remove the "Memory Stick Duo" after copying, then execute the [Format] command in (Internal Memory Tool) (page 54).
- When you copy the data in the internal Memory to the "Memory Stick Duo", all the data will be copied. You cannot choose a specific folder on the "Memory Stick Duo" as the destination for the data to be copied.
- Even if you copy data, a (Print order) mark is not copied.

## ACCESSORIES

**Note:**


- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The parts numbers of such as a cabinet are also appeared in this section. Refer to the parts number mentioned below the name of parts to order.

• Abbreviation


AR : Argentine model	CH : Chinese model	HK : Hong Kong model	KR : Korea model
AUS: Australian model	CND: Canadian model	J : Japanese model	NE : North European model
BR : Brazilian model	EE : East European model	JE : Tourist model	TW : Taiwan model

**Checking supplied accessories.**


Note 1: This item is supplied with the unit as an accessory, but is not prepared as a service part.

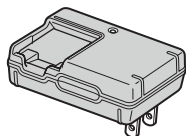

Battery charger (BC-CSGB/CSGC)  
 ▲ 1-479-583-21 (US, CND)

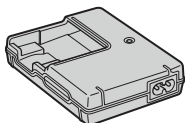

 Battery charger (BC-CSGB/CSGC)  
 ▲ 1-479-583-31 (EXCEPT US, CND)




Multiuse Terminal  
 1-829-866-51




Power cord (EXCEPT US, CND)  
 ▲ 1-555-074-61 (AUS)  
 ▲ 1-823-947-71 (KR)  
 ▲ 1-827-826-41 (AEP, E)  
 ▲ 1-828-050-31 (JE)  
 ▲ 1-832-106-31 (AR)  
 ▲ 1-832-121-31 (CH)  
 ▲ 1-832-169-31 (UK, HK)



 
- Instruction Manual  
 2-319-003-11 (ENGLISH)  
 (EXCEPT US, KR, CH)  
 2-319-003-21 (FRENCH, ITALIAN) (CND, AEP)  
 2-319-003-31 (SPANISH, PORTUGUESE)  
 (AEP, E, JE, AR)  
 2-319-003-41 (GERMAN, DUTCH) (AEP)  
 2-319-003-51 (TRADITIONAL CHINESE, SIMPLIFIED CHINESE)  
 (E, HK, JE, CH)  
 2-319-003-61 (RUSSIAN) (AEP)  
 2-319-003-71 (ARABIC, PERSIAN) (E)  
 2-319-003-81 (KOREAN) (JE)  
 2-319-003-91 (POLISH, CZECH) (AEP)  
 2-319-005-11 (HUNGARIAN, SLOVAK) (AEP)  
 2-319-005-21 (SWEDISH, FINISH) (AEP)  
 2-319-005-31 (NORWEGIAN, DANISH) (AEP)  
 2-319-005-51 (TURKISH, GREEK) (AEP)  
 2-319-005-61 (ENGLISH, SPANISH) (US)



 Rechargeable battery pack (NP-BG1)  
 (Note 1)



Battery Case  
 (Note 1)

 

Wrist Strap  
 2-050-981-01



Conversion (2P) Adaptor  
 ▲ 1-569-007-11 (JE)



Conversion (2P) Adaptor  
 ▲ 1-569-008-11 (E)



Cyber-shot Handbook (PDF)

The CD-ROM supplied contains all of language version of the instruction Manual in pdf for printing.

Note : The printed matter is not supplied. If required, please order it with the part number below.

- |                                    |                          |
|------------------------------------|--------------------------|
| 2-899-987-11 (ENGLISH)             | 2-899-988-51 (POLISH)    |
| 2-899-987-21 (FRENCH)              | 2-899-988-61 (CZECH)     |
| 2-899-987-31 (ITALIAN)             | 2-899-988-71 (HUNGARIAN) |
| 2-899-987-41 (SPANISH)             | 2-899-988-81 (SLOVAK)    |
| 2-899-987-51 (PORTUGUESE)          | 2-899-988-91 (SWEDISH)   |
| 2-899-987-61 (GERMAN)              | 2-899-989-11 (FINNISH)   |
| 2-899-987-71 (DUTCH)               | 2-899-989-21 (NORWEGIAN) |
| 2-899-987-81 (TRADITIONAL CHINESE) | 2-899-989-31 (DANISH)    |
| 2-899-987-91 (SIMPLIFIED CHINESE)  | 2-899-989-41 (THAI)      |
| 2-899-988-11 (RUSSIAN)             | 2-899-989-51 (MALAYSIAN) |
| 2-899-988-21 (ARABIC)              | 2-899-989-61 (TURKISH)   |
| 2-899-988-31 (PERSIAN)             | 2-899-989-71 (GREEK)     |
| 2-899-988-41 (KOREAN)              |                          |

CD-ROM  
 (Cyber-shot application software/"Cyber-shot Handbook"/"Cyber-shot Step-up Guide")  
 2-899-984-01 (EXCEPT US)  
 2-899-986-01 (US)

• Refer to the cover for mark ▲.

# SONY®

# Cyber-shot

**Digital Still Camera**

## **Instruction Manual**

**DSC-W35/W55**

GB



For details on the advanced operations, please access  
“**Cyber-shot Handbook**” contained on the supplied CD-  
ROM via a computer.

### Operating Instructions

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

## Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.


Model No. DSC-W35/W55

Serial No. \_\_\_\_\_

## WARNING

**To reduce fire or shock hazard, do not expose the unit to rain or moisture.**

## For Customers in the U.S.A.

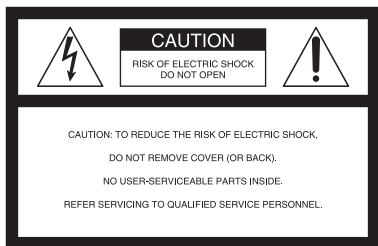

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

## Use

### Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

### Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

### Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

### Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

### Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

## Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

## Installation

### Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

### Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

### Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

### Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

### Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for

long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

## Service

### Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

### Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

### Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

### Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.

## Read this first

### CAUTION

Replace the battery with the specified type only. Otherwise, fire or injury may result.

### For Customers in the U.S.A. and Canada

#### RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrcc.org/>

**Caution:** Do not handle damaged or leaking Lithium-Ion batteries.

### Battery charger

This power unit is intended to be correctly orientated in a vertical or floor mount position.

### For Customers in the U.S.A.

If you have any questions about this product, you may call:

Sony Customer Information Center  
1-800-222-SONY (7669)

The number below is for the FCC related matters only.

#### Regulatory Information

##### Declaration of Conformity

Trade Name: SONY  
Model No.: DSC-W55  
Responsible Party: Sony Electronics Inc.  
Address: 16530 Via Esprillo,  
San Diego, CA 92127U.S.A.  
Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

##### Declaration of Conformity

Trade Name: SONY  
Model No.: DSC-W35  
Responsible Party: Sony Electronics Inc.  
Address: 16530 Via Esprillo,  
San Diego, CA 92127U.S.A.  
Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

## For the State of California, USA only

Perchlorate Material - special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)  
Perchlorate Material : Lithium battery contains perchlorate.

## For Customers in Europe

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

## Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

## Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.



## Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an  or  mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

# Table of contents

IMPORTANT SAFEGUARDS .....	2
Read this first .....	4
Notes on using your camera .....	8
<b>Getting started .....</b>	<b>9</b>
Checking the accessories supplied .....	9
1 Preparing the battery pack .....	10
2 Inserting the battery pack/a "Memory Stick Duo" (not supplied) .....	11
3 Turning the camera on/setting the clock .....	13
<b>Shooting images easily .....</b>	<b>14</b>
<b>Viewing/deleting images .....</b>	<b>17</b>
<b>Indicators on the screen .....</b>	<b>19</b>
<b>Changing the settings – Menu/Setup .....</b>	<b>21</b>
Menu items .....	22
Setup items .....	23
<b>Enjoying your computer .....</b>	<b>25</b>
Supported Operating Systems for USB connection and application software (supplied) .....	25
Viewing "Cyber-shot Handbook" .....	25
<b>Battery life and memory capacity .....</b>	<b>26</b>
Battery life and number of images that can be recorded/viewed .....	26
Number of still images and recording time of movies .....	27
<b>Troubleshooting .....</b>	<b>29</b>
Battery pack and power .....	29
Shooting still images/movies .....	30
Viewing images .....	30
<b>Precautions .....</b>	<b>31</b>
<b>Specifications .....</b>	<b>32</b>

---

## Notes on using your camera

### Internal memory and “Memory Stick Duo” back up

Do not turn off the camera or remove the battery pack or “Memory Stick Duo” while the access lamp is lighted, as the internal memory data or “Memory Stick Duo” data may be destroyed. Always protect your data by making a back up copy.

### Notes on recording/playback

- Before you record, make a trial recording to make sure that the camera is working correctly.
- This camera is neither dust-proof, nor splash-proof, nor water-proof. Read “Precautions” (page 31) before operating the camera.
- Be careful not to get the camera wet. Water entering the inside of the camera may cause malfunctions which in some cases may not be repairable.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of your camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. The camera may not be able to record or play back properly.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 31).
- Do not shake or strike the camera. In addition to malfunctions and an inability to record images, this may render the recording medium unusable, or cause image data breakdown, damage or loss.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

### Notes on the LCD screen

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in color) that constantly appear on the LCD screen. These points are normal in the manufacturing process and do not affect the recording in any way.
- The camera will not function with the lens portion extended when the battery pack is discharged. Insert a charged battery pack, then turn on the camera again.

### On image data compatibility

- This camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Playback of images recorded with your camera on other equipment and playback of images recorded or edited with other equipment on your camera are not guaranteed.

### Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

### No compensation for contents of the recording

The contents of the recording cannot be compensated for if recording or playback is not possible due to a malfunction of your camera or recording media, etc.


### On illustrations

Illustrations used in this manual are of the DSC-W55 unless noted otherwise.

# Getting started

## Checking the accessories supplied


- Battery charger BC-CSG/BC-CSGB/BC-CSGC (1)

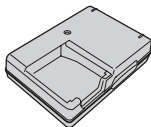


- Power cord (mains lead) (1)  
(not supplied in the USA and Canada)



- Rechargeable battery pack NP-BG1 (1)/  
Battery case (1)

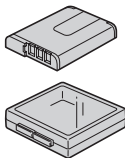

 
- USB, A/V cable for multi-use terminal (1)  
(DSC-W55)




- USB cable (1) (DSC-W35)



 - A/V cable (1) (DSC-W35)




- Wrist strap (1)

 


- CD-ROM (Cyber-shot application software/  
"Cyber-shot Handbook") (1)
- Instruction Manual (this manual) (1)

### DSC-W55

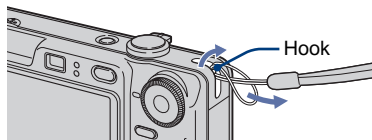


### DSC-W35

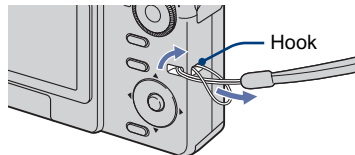


Attach the strap and pass your hand through it to prevent the camera from damage by being dropped, etc.

# 1 Preparing the battery pack

For customers in the USA and Canada

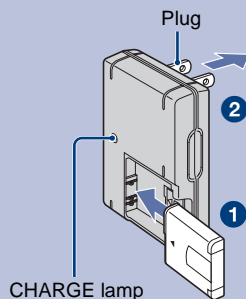

For customers other than those in the USA and Canada

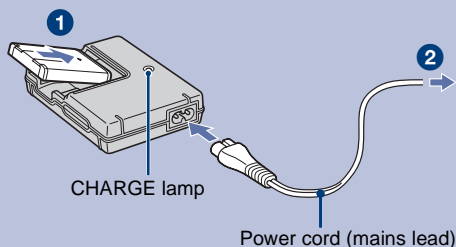

**1** Insert the battery pack into the battery charger.

**2** Connect the battery charger to the wall outlet (wall socket).

The CHARGE lamp lights on, and charging starts.

When the CHARGE lamp turns off, charging is finished (Practical charge).


If you continue charging the battery pack for about one more hour (until it is fully charged), the charge will last slightly longer.

## Charging time

Full charge time	Practical charge time
Approx. 330 min.	Approx. 270 min.

- Time required to charge a fully depleted battery pack at a temperature of 25°C (77°F). Charging may take longer under certain circumstances or conditions.
- For details on the battery life and memory capacity, see page 26.
- Connect the battery charger to an easily accessible wall outlet (wall socket) close by.
- Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- Designed for use with compatible Sony batteries.

## 2 Inserting the battery pack/a “Memory Stick Duo” (not supplied)

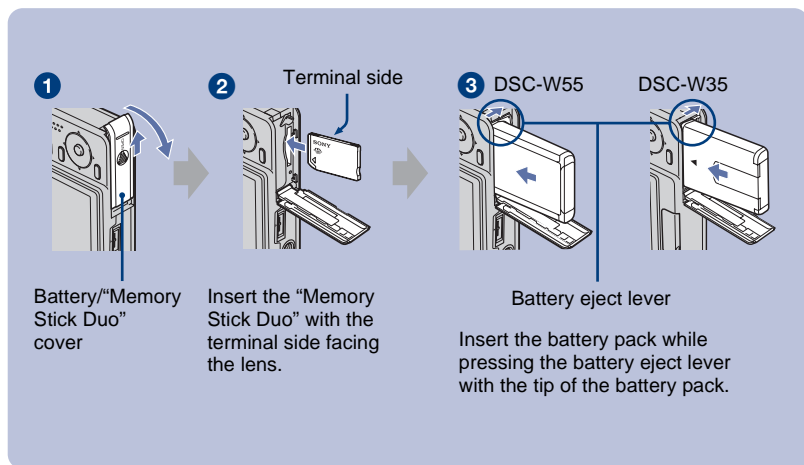

- 1** Open the battery/“Memory Stick Duo” cover.
- 2** Insert the “Memory Stick Duo” (not supplied) all the way in until it clicks.
- 3** Insert the battery pack.
- 4** Close the battery/“Memory Stick Duo” cover.

### When there is no “Memory Stick Duo” inserted

The camera records/plays back images using the internal memory (approx. 56 MB).

### To check the remaining battery time

Press POWER button to turn on and check the remaining battery on the LCD screen.


<b>Battery remaining indicator</b>					
<b>Battery remaining guidelines</b>	Sufficient power remaining	Slightly consumed	Battery half full	Battery low, recording/playback will stop soon.	Change the battery with fully charged one, or charge the battery. (The warning indicator flashes.)

- It takes about one minute until the correct battery remaining indicator appears.
- The displayed battery remaining indicator may not be correct under certain circumstances.
- The Clock Set screen appears when the camera is turned on for the first time (page 13).

## **I To remove the battery pack/“Memory Stick Duo”**


Open the battery/“Memory Stick Duo” cover.

### **“Memory Stick Duo”**

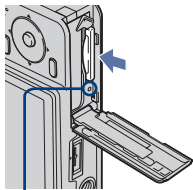

Make sure that **the access lamp** is not lit, then push the “Memory Stick Duo” in once.

### **Battery pack**

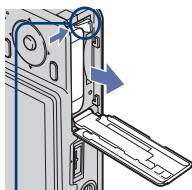


Slide **the battery eject lever**.

- Be sure not to drop the battery pack.

- Never remove the battery pack/“Memory Stick Duo” when the access lamp is lit, otherwise the data may be destroyed.

### 3 Turning the camera on/setting the clock

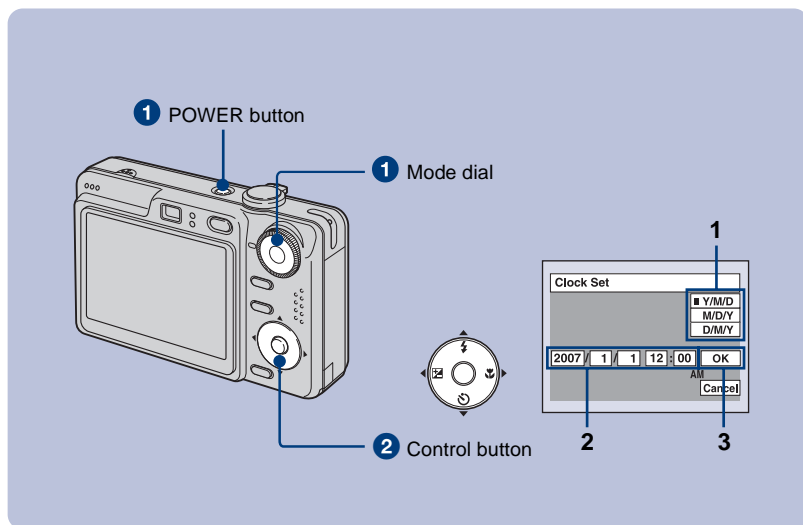

**1** Select with the mode dial, then press the POWER button.

**2** Set the clock with the control button.

- 1 Select the date display format with ▲/▼, then press ●.
- 2 Select each item with ◀/▶ and set the numeric value with ▲/▼, then press ●.
- 3 Select [OK] with ▶, then press ●.


#### To change the date and time

Select [Clock Set] in the (Setup) screen (page 21).

#### When you turn on the power


- Unless you set the clock, the Clock Set screen appears each time the camera is turned on.
- If the camera is running on battery power and you do not operate the camera for about three minutes, the camera turns off automatically to prevent wearing down the battery pack (Auto power-off function).

# Shooting images easily

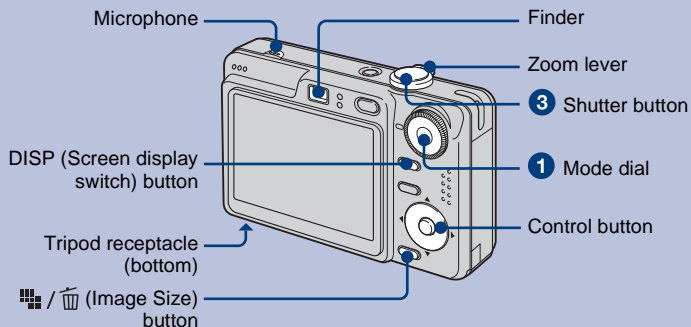


## 1 Select a mode with the mode dial.

**Still image (auto adjustment mode):** Select .

**Movie:** Select .

## 2 Hold the camera steady, keeping your arm at your side.

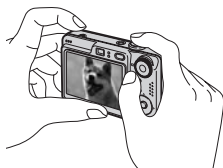

Position the subject in the center of the focus frame.  
Do not cover the microphone with your finger.

## 3 Shoot with the shutter button.

**Still image:**

1 Press and hold the shutter button halfway down to focus.

The ● (AE/AF lock) indicator (green) flashes, a beep sounds, the indicator stops flashing and remains lit.

2 Press the shutter button fully down.  
The shutter sounds.

AE/AF lock indicator



**Movie:**

Press the shutter button fully down.

To stop recording, press the shutter button fully down again.

## Selecting the mode dial

Set the mode dial to the desired function.

### Auto Adjustment

Allows easy shooting with the settings adjusted automatically.

### P: Program Auto

Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). Also you can select various settings using the menu.

### Movie

Record movie with sound.

### High Sensitivity

Shoot images without a flash even in low lighting.

### Soft Snap

Shoot a person's skin with a warmer look.

### Twilight Portrait

Shoot sharp images of people in a dark place without losing the nighttime atmosphere.

### Twilight

Shoot night scenes without losing the nighttime atmosphere.

### Landscape

Shoot with the focus on a distant subject.

### Beach

Shoot seaside or lakeside scenes with the blueness of the water captured more vividly.

### Snow


Shoot snow scenes in white more clearly.

## Using the zoom

Slide the zoom lever.


- When the zoom scale exceeds 3×, the camera uses the Digital Zoom function.
- You cannot change the zoom scale while shooting a movie.


## Flash (Selecting a flash mode for still images)

Press  on the control button repeatedly until the desired mode is selected.


(No indicator): Flash Auto

Strobes when there is insufficient light or backlight (default setting)


: Flash forced on


: Slow synchro (Flash forced on)

The shutter speed is slow in a dark place to clearly shoot the background that is out of flash light.


: Flash forced off

## Macro (Shooting close-up)


Press  on the control button.

 
To cancel, press  again.

(No indicator): Macro off

: Macro on (W side: Approx. 2 cm or farther (13/16 inches or farther), T side: Approx. 30 cm or farther (11 7/8 inches or farther))

## Using the self-timer


Press  on the control button repeatedly until the desired mode is selected.



Self-timer lamp

(No indicator): Not using the self-timer

: Setting the 10-second delay self-timer

: Setting the 2-second delay self-timer

Press the shutter button, the self-timer lamp flashes, and a beep sounds until the shutter operates.

## EV (Adjusting the exposure)

Press ◀ (EV) on the control button, then press ▲/▼ to adjust the exposure.


Toward +: Brightens an image.

Toward -: Darkens an image.

To turn off the EV adjustment bar, press the ◀ button again.

## DISP Changing the screen display

Each time you press the DISP (Screen display switch) button, the display changes as follows.

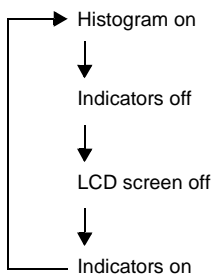

## To change the image size

Press the / (Image Size) button, then press ▲/▼ to select the size.

To turn off the Image Size menu, press the / button again.

Still images

Image size	Guidelines
7M	Up to A3/11×17" print
3:2	Match 3:2 Aspect Ratio
5M	Up to A4/8×10" print
3M	Up to 13×18cm /5×7" print
2M	Up to 10×15cm /4×6" print
VGA	For E-mail
16:9	Display On 16:9 HDTV

Movies

Image size	Guidelines
640(Fine)	Display on TV (high quality)
640(Standard)	Display on TV (standard)
160	For E-mail

## On the recordable number of still images and recordable time of movies

Recordable number of still images and recordable time of movies vary depending on the selected image size.

Still images

Maximum number of recordable images




Movies

Maximum recordable time



- The number of recordable images and time can differ according to shooting conditions.

# Viewing/deleting images

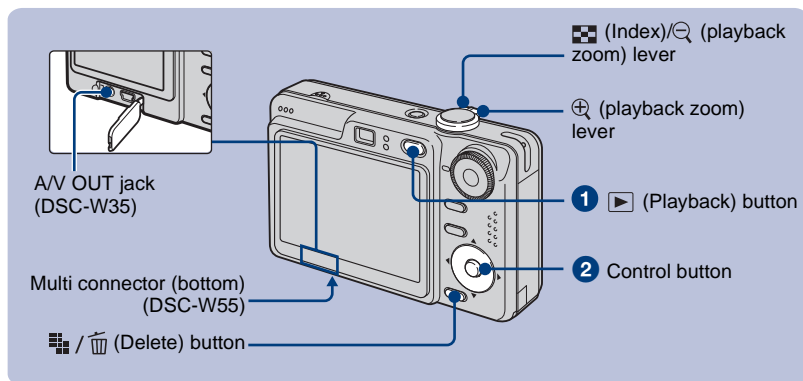

## 1 Press (Playback) button.

- If you press (Playback) button when the camera is powered off, the camera is turned on in the playback mode. If you press again, switches to recording mode.

## 2 Select an image with / on the control button.

### Movie:

Press to play back a movie. (Press again to stop playback.)

Press to fast forward, press to rewind. (Press to return to normal playback.)

Press / to adjust the volume.

## / To delete images

1 Display the image you want to delete and press / (Delete).

2 Select [Delete] with , then press .

## To view an enlarged image (playback zoom)

Slide lever while displaying a still image. To undo the zoom, slide lever.

Adjust the portion: / / /








 

 





Cancel playback zoom:

## Viewing an index screen

Slide (Index) lever and select an image with / / / . To display the next (previous) index screen, press / .

To return to the single-image screen, press .


## To delete images in index mode

- 1 While an index screen is displayed, press  /  (Delete) and select [Select] with  /  on the control button, then press .
- 2 Select the image you want to delete with  /  /  / , then press  to display the  (Delete) indicator on the selected image.
- 3 Press  /  (Delete).
- 4 Select [OK] with , then press .


## To view images on TV screen

Connect the camera to the TV with the cable for multi-use terminal (DSC-W55) or the A/V cable (DSC-W35).

### DSC-W55

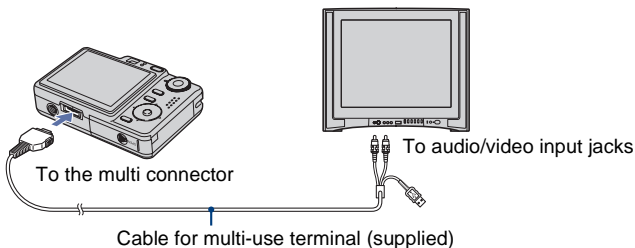


### DSC-W35

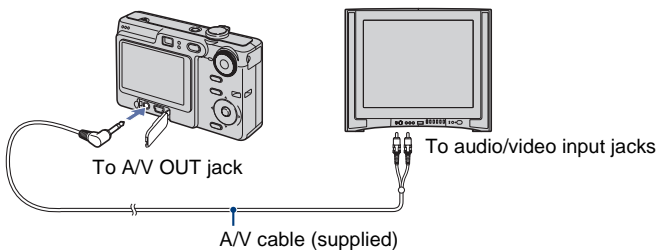


# Indicators on the screen

Everytime you press the DISP (Screen display switch) button, the display data and indicator is turned on and off (page 16).


## When shooting still images

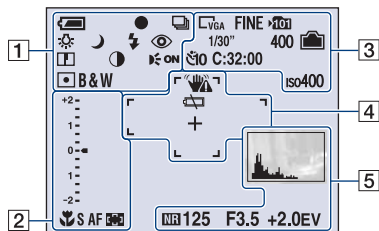

## When shooting movies

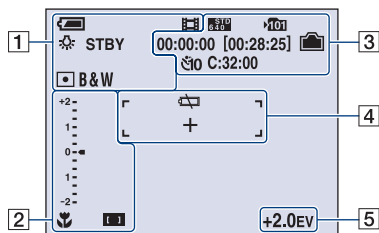

## When playing back

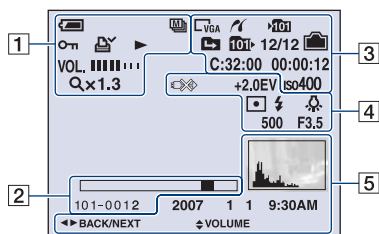

1

	Battery remaining
	AE/AF lock
	Recording mode
	White balance
	Standby/Recording a movie
	Mode dial (Scene Selection)
	Mode dial (Program Auto)
	Camera mode
	Flash mode
	Flash charging
	Zoom scaling
	Red-eye reduction
	Sharpness
	Contrast
	AF illuminator
	Metering mode
	Color mode
	Playback mode
	Protect
	Print order (DPOF) mark
	Zoom scaling
	Frame by frame playback
	Playback
	Volume

2

	Macro
S AF M AF	AF mode
	AF range finder frame indicator
1.0m	Focus preset distance
+2 1 0 -1 -2	EV adjustment bar
▼ Darker ▲ Brighter	Adjusting EV
101-0012	Folder-file number
	Playback bar

3

	PictBridge connecting
	Image size
FINE STD	Image quality
	Recording folder
	Change folder
	Playback folder
	Remaining internal memory capacity
	Remaining "Memory Stick" capacity
00:00:00 [00:28:25]	Recording time [maximum recordable time]
1/30"	Multi Burst interval
400	Remaining number of recordable images
	Self-timer
C:32:00	Self-diagnosis display
iso400	ISO number

12/12	Image number/Number of images recorded in selected folder
00:00:12	Counter


4


	Vibration warning
	Low battery warning
	PictBridge connecting
+2.0EV	Exposure Value
	Metering mode
	Flash
	White balance
+	Spot metering cross hair
	AF range finder frame
500	Shutter speed
F3.5	Aperture value

5



	Histogram •  appears when histogram display is disabled.
NR	NR slow shutter
125	Shutter speed
F3.5	Aperture value
+2.0EV	Exposure Value
2007 1 1 9:30 AM	Recorded date/time of the playback image
● PAUSE ● PLAY	Playing back Multi Burst images in series
◀▶ BACK/ NEXT	Select images
◆ VOLUME	Adjust volume
	Menu

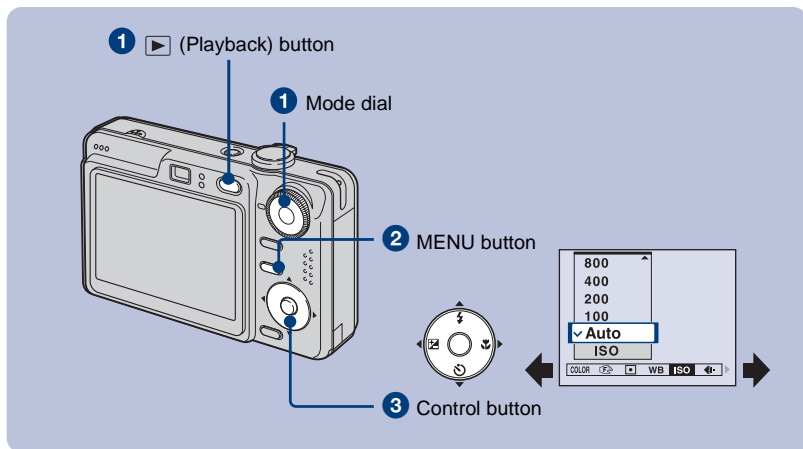


# Changing the settings – Menu/Setup



- 1 Recording:** Turn on the camera, then set the mode dial.  
**Playback:** Press  (Playback) button.

Different items are available depending on the position of the mode dial and Recording/Playback mode.

- 2 Press MENU to display the menu.**  
**3 Select the desired menu item with /  on the control button.**








- If the desired item is invisible, keep pressing /  until the item appears on the screen.
- Press  after selecting an item in the playback mode.


- 4 Select a setting with / .**

The setting you select is zoomed and set.

- 5 Press MENU to turn off the menu.**

## To select a Setup item



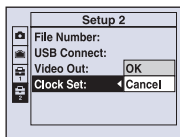






Press and hold MENU, or select  (Setup) in step **3** and then press . Select the item to set with / / / , then press .




 






## Menu items

The available menu items vary depending on the mode dial position and menu settings. Only the available items are displayed on the screen.

### Menu for shooting

 COLOR (Color Mode)	Changes the vividness of the image or adding special effects.
 (Focus)	Changes the focus method.
 (Metering Mode)	Selects the metering mode.
WB (White Bal)	Adjusts the color tones.
ISO	Selects a luminous sensitivity.
 (P. Quality)	Selects the still image quality.
Mode (REC Mode)	Selects the continuous shooting method.
 (Interval)	Selects the frame interval when the REC Mode is set to [Multi Burst].
 (Flash Level)	Adjusts the amount of flash light.
 (Contrast)	Adjusts the contrast of the image.
 (Sharpness)	Adjusts the sharpness of the image.
 (Setup)	Changes Setup items.

### Menu for viewing

 (Folder)	Selects the folder for viewing images.
 (Protect)	Prevents accidental erasure.
DPOF	Adds a Print order mark.
 (Print)	Prints images using a PictBridge compliant printer.
 (Slide)	Plays back a series of images.
 (Resize)	Changes the image size of a recorded image.
 (Rotate)	Rotates a still image.
 (Divide)	Cuts movies.
 (Setup)	Changes Setup items.
Trimming	Records an enlarged image. (Available only for playback zoom.)

---

## Setup items

### Camera

AF Mode	Selects the auto focus operation mode.
Digital Zoom	Selects the digital zoom mode.
Function Guide	Displays the description of functions when you operate the camera.
Red Eye Reduction	Reduces the red-eye phenomenon when using the flash.
AF Illuminator	Supplies fill light to focus more easily on a subject in dark surroundings.
Auto Review	Displays the recorded image on the screen for approximately two seconds immediately after shooting a still image.


### Internal Memory Tool

Format	Formats the internal memory.
--------	------------------------------

### Memory Stick Tool

Format	Formats the "Memory Stick Duo".
Create REC. Folder	Creates a folder in a "Memory Stick Duo" for recording images.
Change REC. Folder	Changes the folder currently used for recording images.
Copy	Copies all images in the internal memory to a "Memory Stick Duo".

 **Setup 1**

LCD Backlight (DSC-W55 only)	Selects the brightness of the LCD backlight when using the camera with battery pack.
Beep	Selects the sound produced when you operate the camera.
 Language	Selects the language to be used to display the menu items, warnings, and messages.
Initialize	Initializes the setting to the default setting.

 **Setup 2**

File Number	Selects the method used to assign file numbers to images.
USB Connect	Selects the USB mode to be used when connecting the camera to a computer or a PictBridge compliant printer using the cable for multi-use terminal (DSC-W55) or the USB cable (DSC-W35).
Video Out	Sets the video signal output according to the TV color system of the connected video equipment.
Clock Set	Sets the date and time.

# Enjoying your computer

You can display images shot with the camera on the computer. Also, you can use still images and movies from the camera more than ever by taking advantage of the software. For details, refer to “Cyber-shot Handbook.”

## Supported Operating Systems for USB connection and application software (supplied)

	For Windows users	For Macintosh users
USB connection	Windows 2000 Professional, Windows XP Home Edition or Windows XP Professional	Mac OS 9.1/9.2/ Mac OS X(v10.1 to v10.4)
Application software “Picture Motion Browser”	Windows 2000 Professional, Windows XP Home Edition or Windows XP Professional	not compatible

- Must be installed with above OS at delivery.
- If your OS does not support USB connections, use a commercially available Memory Stick Reader/Writer.
- For further details on the operating environment of Cyber-shot application software, “Picture Motion Browser”, refer to “Cyber-shot Handbook.”



## Viewing “Cyber-shot Handbook”

### For Windows users

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive. The screen below appears.



When you click the [Cyber-shot Handbook] button, the screen for copying “Cyber-shot Handbook” appears. Follow the on-screen instructions to copy.

- 2 After the installation is complete, double-click the shortcut created on the desktop.

### For Macintosh users

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive. Select the “Handbook” folder and copy “Handbook.pdf” stored in the “GB” folder to your computer.
- 2 After copying is complete, double-click “Handbook.pdf.”

# Battery life and memory capacity

## Battery life and number of images that can be recorded/viewed


The tables show the approximate number of images that can be recorded/viewed and the battery life when you shoot images in [Normal] mode with the battery pack (supplied) at full capacity and at an ambient temperature of 25°C (77°F). The numbers of images that can be recorded or viewed take into account changing the “Memory Stick Duo” as necessary.

Note that the actual numbers may be less than those indicated in the table depending on the conditions of use.

- Battery capacity decreases as you use it more, as the time passes.
- The number of images that can be recorded/viewed and the battery life are decreased under the following conditions:
  - The surrounding temperature is low.
  - The flash is used frequently.
  - The camera has been turned on and off many times.
  - The zoom is used frequently.
  - The brightness of LCD Backlight is set to up (DSC-W55 only).
  - [AF Mode] is set to [Monitor].
  - The battery power is low.

### When shooting still images

LCD screen	No. of images	Battery life (min.)
DSC-W55		
On	Approx. 380	Approx. 190
Off	Approx. 490	Approx. 245
DSC-W35		
On	Approx. 380	Approx. 190
Off	Approx. 480	Approx. 240

- Shooting in the following situations:
  -  (P.Quality) is set to [Fine].
  - [AF Mode] is set to [Single].
  - Shooting once every 30 seconds.
  - The zoom is switched alternately between the W and T ends.

- The flash strobes once every two times.
- The power turns on and off once every ten times.

- The measurement method is based on the CIPA standard.

(CIPA: Camera & Imaging Products Association)

- The number of images/battery life does not change, regardless of image size.

### When viewing still images

No. of images	Battery life (min.)
DSC-W55	
Approx. 8800	Approx. 440
DSC-W35	
Approx. 6800	Approx. 340

- Viewing single images in order at about three second intervals

### When shooting movies

LCD screen on (min.)	LCD screen off (min.)
DSC-W55	
Approx. 180	Approx. 230
DSC-W35	
Approx. 180	Approx. 230

- Shooting movies continuously with an image size of [160]

## Number of still images and recording time of movies

The number of still images and the length of time for movies may vary depending on the shooting conditions and recording medium.

- For details on the image size, see page 16.

### The approximate number of still images (The image quality is [Fine] on the upper line and [Standard] on the lower line.)

(Units: Images)

Capacity Size	Internal memory	"Memory Stick Duo" formatted with this camera						
	Approx. 56MB	128MB	256MB	512MB	1GB	2GB	4GB	8GB
7M	16	37	67	137	279	573	1132	2272
	33	73	132	268	548	1125	2223	4459
3:2	16	37	67	137	279	573	1132	2272
	33	73	132	268	548	1125	2223	4459
5M	23	51	92	188	384	789	1559	3127
	43	96	174	354	723	1482	2928	5873
3M	37	82	148	302	617	1266	2501	5017
	67	149	264	537	1097	2250	4447	8919
2M	60	133	238	484	988	2025	4002	8027
	111	246	446	907	1852	3798	7504	15052
VGA	357	790	1428	2904	5928	12154	24014	48166
	892	1975	3571	7261	14821	30385	60036	120416
16:9	60	133	238	484	988	2025	4002	8027
	111	246	446	907	1852	3798	7504	15052

- The number of images listed is for when [Mode] is set to [Normal].
- When the number of remaining shootable images is greater than 9,999, the ">9999" indicator appears.
- You can resize the images later ([Resize], page 22).

## The approximate recording time of movies

(Units: hour : minute : second)

Capacity Size	Internal memory	"Memory Stick Duo" formatted with this camera						
	Approx. 56MB	128MB	256MB	512MB	1GB	2GB	4GB	8GB
640(Fine)	—	—	0:02:50	0:06:00	0:12:20	0:25:10	0:50:00	1:40:20
640(Standard)	0:02:30	0:05:50	0:10:40	0:21:40	0:44:20	1:31:00	3:00:00	6:01:10
160	0:42:40	1:31:30	2:51:20	5:47:00	11:44:20	24:18:20	48:01:40	96:19:50

- Movies with the size set to [640(Fine)] can only be recorded on a "Memory Stick PRO Duo".
- Recordable movie file size is up to approx. 2 GB for each file. If the size reaches approx. 2 GB, the camera stops recording automatically.
- When images recorded using earlier Sony models are played back on this camera, the display may differ from the actual image size.

# Troubleshooting

If you experience trouble with your camera, try the following solutions.

**1 Check the items below, and refer to “Cyber-shot Handbook” (PDF).**

If a code such as “C/E:□□:□□” appears on the screen, refer to “Cyber-shot Handbook.”

**2 Remove the battery pack, and insert the battery pack again after about one minute, and turn on the power.**

**3 Initialize the settings (page 24).**

**4 Consult your Sony dealer or local authorized Sony service facility.**

Please understand that you give your consent that the contents of the internal memory may be checked when you send your camera to be repaired.

## Battery pack and power

### The battery pack cannot be installed.

- Install the battery pack correctly using the tip of the battery pack to push the battery eject lever (page 11).

### Cannot turn on the camera.

- Install the battery pack correctly (page 11).
- The battery pack is discharged. Install charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.
- Use a recommended battery pack (page 9).

### The power turns off suddenly.

- If you do not operate the camera for about three minutes while the power is on, the camera turns off automatically to prevent wearing down the battery pack. Turn on the camera again (page 13).
- The battery pack is dead. Replace it with a new one.

### The battery cannot be charged.

- You cannot charge the battery with the AC adaptor (not supplied).


 
---

### The battery remaining indicator is incorrect.

- This phenomenon occurs when you use the camera in an extremely hot or cold location.
- The displayed battery remaining differs from the current one. Fully discharge and then charge the battery pack to correct the display.
- The battery pack is discharged. Install the charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.

## Shooting still images/movies

### Your camera cannot record images.

- Check the free capacity of the internal memory or “Memory Stick Duo” (pages 27, 28). If it is full, do one of the following:
  - Delete unnecessary images (page 17).
  - Change the “Memory Stick Duo”.
- You are using the “Memory Stick Duo” with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position.
- You cannot record images while charging the flash.
- Set the mode dial to a position other than  when shooting a still image.
- Set the mode dial to  when shooting movies.
- The image size is set to [640(Fine)] when recording movies. Do one of the following:
  - Set the image size to other than [640(Fine)].
  - Insert a “Memory Stick PRO Duo”.


---

### Cannot insert dates on images.

- This camera does not have a feature for superimposing dates on images. You can print or save images with the date inserted using “Picture Motion Browser”.

## Viewing images

### Your camera cannot play back images.

- Press  (Playback) button (page 17).
- The folder/file name has been changed on your computer.
- When an image file has been processed by a computer or when the image file was recorded using a model other than that of your camera, playback on your camera is not guaranteed.
- The camera is in USB mode. Delete the USB connection.

# Precautions

## Do not use/store the camera in the following places

- In an extremely hot, cold or humid place  
In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Under direct sunlight or near a heater  
The camera body may become discolored or deformed, and this may cause a malfunction.
- In a location subject to rocking vibration
- Near strong magnetic place
- In sandy or dusty places  
Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

## On carrying

Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

## On cleaning

### Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (not supplied) to remove fingerprints, dust, etc.

### Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

### Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. Do not use the following as they may damage the finish or the casing.

- Chemical products such as thinner, benzene, alcohol, disposable cloths, insect repellent, sunscreen or insecticide, etc.
- Do not touch the camera with the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

## On operating temperatures

Your camera is designed for use under the temperatures between 0°C and 40°C (32°F and 104°F). Shooting in extremely cold or hot places that exceed this range is not recommended.

## On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

### If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to shoot with moisture remaining inside the lens, you will be unable to record clear images.

## On the internal rechargeable backup battery

This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera as long as you do not record the date and time.

### Charging method of the internal rechargeable backup battery

Insert charged battery pack in the camera and leave the camera for 24 hours or more with the power off.

# Specifications

## Camera

### [System]

Image device: 7.20 mm (1/2.5 type) color CCD,  
Primary color filter  
Total pixel number of camera:  
Approx. 7 410 000 pixels  
Effective pixel number of camera:  
Approx. 7 201 000 pixels  
Lens: Carl Zeiss Vario-Tessar 3× zoom lens f =  
6.3 – 18.9 mm (38 – 114 mm when converted  
to a 35 mm still camera) F2.8 – 5.2  
Exposure control: Automatic exposure, Scene  
Selection (7 modes)  
White balance: Automatic, Daylight, Cloudy,  
Fluorescent, Incandescent, Flash  
File format (DCF compliant):  
Still images: Exif Ver. 2.21 JPEG compliant,  
DPOF compatible  
Movies: MPEG1 compliant (Monaural)  
Recording media: Internal Memory (approx.  
56 MB), “Memory Stick Duo”  
Flash: Flash range (ISO sensitivity  
(Recommended Exposure Index) set to Auto):  
approx. 0.2 to 3.9 m (7 7/8 inches to 12 feet  
9 5/8 inches) (W)/approx. 0.3 to 2.0 m (11 7/8  
inches to 6 feet 6 3/4 inches) (T)

### [Input and Output connectors]

#### DSC-W55

Multi connector: Video, Audio (Monaural), USB  
communication  
USB communication: Hi-Speed USB (USB 2.0  
compliant)

#### DSC-W35

A/V OUT jack: Minijack  
Video, Audio (Monaural)  
USB jack: mini-B  
USB communication: Hi-Speed USB (USB 2.0  
compliant)

### [LCD screen]

#### DSC-W55

LCD panel: 6.2 cm (2.5 type) TFT drive  
Total number of dots: 115 200 (480×240) dots

#### DSC-W35

LCD panel: 5.1 cm (2.0 type) TFT drive  
Total number of dots: 84 960 (354×240) dots

### [Power, general]

Power: Rechargeable battery pack NP-BG1, 3.6 V  
AC-LS5K AC Adaptor (not supplied), 4.2 V  
Power consumption (during shooting with the  
LCD screen on):

#### DSC-W55

1.0 W

#### DSC-W35

1.0 W

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature: –20 to +60°C (–4 to +140°F)

Dimensions:

#### DSC-W55

88.9×57.1×22.9 mm (3 1/2×2 1/4×29/32  
inches) (W/H/D, excluding protrusions)

#### DSC-W35

89.8×59.1×22.9 mm (3 5/8×2 3/8×29/32  
inches) (W/H/D, excluding protrusions)

Mass:

#### DSC-W55

Approx. 147 g (5.2 oz) (including NP-BG1  
battery pack and wrist strap, Etc.)

#### DSC-W35

Approx. 149 g (5.3 oz) (including NP-BG1  
battery pack and wrist strap, Etc.)

Microphone: Monaural

Speaker: Monaural

Exif Print: Compatible

PRINT Image Matching III: Compatible

PictBridge: Compatible

## BC-CSG/BC-CSGB/BC-CSGC battery charger

Power requirements: AC 100 to 240 V, 50/60 Hz,  
2 W (BC-CSG/BC-CSGC) 2.6 W (BC-  
CSGB)

Output voltage: DC 4.2 V, 0.25 A

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature: –20 to +60°C (–4 to +140°F)

Dimensions: Approx. 62×24×91 mm (2 1/2×  
3 1/32×3 5/8 inches) (W/H/D)

Mass: Approx. 75 g (2.7 oz)

## Rechargeable battery pack NP- BG1

Used battery: Lithium-ion battery


Maximum voltage: DC 4.2 V

Nominal voltage: DC 3.6 V

Capacity: 3.4 Wh (960 mAh)

Design and specifications are subject to change  
without notice.

## Trademarks

- **Cyber-shot** is a trademark of Sony Corporation.
- “Memory Stick”, , “Memory Stick PRO”, **MEMORY STICK PRO**, “Memory Stick Duo”, **MEMORY STICK DUO**, “Memory Stick PRO Duo”, **MEMORY STICK PRO DUO**, “Memory Stick Micro”, “MagicGate”, and **MAGIC GATE** are trademarks of Sony Corporation.
- Microsoft, Windows and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh, Mac OS, iMac, iBook, PowerBook, Power Mac and eMac are trademarks or registered trademarks of Apple Computer, Inc.
- Intel, MMX, and Pentium are trademarks or registered trademarks of Intel Corporation.
- Google is a registered trademark of Google Inc.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the <sup>TM</sup> or ® marks are not used in all cases in this manual.





Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>



Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Printed in China



2319003110

