

| | | | | |
|---|---|---|--|--|
| <p>Step 1</p> <p>⊕ 2 x 3.6 mm</p> | <p>Step 4</p> <p>⊕ 1 x 2.5 mm</p> | <p>Step 8</p> <p>⊕ 1 x 1.2 mm ⊕ 1 x 1.6 mm</p> | <p>Step 12</p> <p>⊕ 1 x 1.9 mm</p> | <p>Step 13</p> <p>⊕ 1 x 2.3 mm ⊕ 2 x 1.6 mm ⊕ 1 x 1.4 mm ⊕ 1 x 4.8 mm</p> |
| <p>Step 16</p> <p>⊕ 1 x 2.4 mm</p> | <p>Step 18</p> <p>⊖ 1 x 4.8 mm</p> | <p>Step 20</p> <p>⊕ 1 x 2.4 mm</p> | <p>Step 22</p> <p>⊕ 1 x 6 mm ⊕ 1 x 1.4 mm</p> | <p>Step 23</p> <p>⊕ 1 x 1.5 mm</p> |
| <p>Step 24</p> <p>⊕ 3 x 1.5 mm</p> | <p>Step 25</p> <p>⊕ 1 x 1.5 mm</p> | <p>Step 26</p> <p>⊕ 1 x 1.5 mm</p> | <p>Step 27</p> <p>⊕ 3 x 1.5 mm (L) ⊕ 1 x 1.5 mm (S)</p> | |

* Measurements are according to overall screw length.

* Screw maps are meant to be used only with **iFixit repair guides**.



IPHONE 4
Display Assembly Replacement

TOOLS

- iPhone 5-Point Pentalobe Screwdriver
- iPhone SIM Card Eject Tool
- Phillips #000 Screwdriver
- Phillips #00 Screwdriver
- Plastic Opening Tools
- 2.5 mm Flathead Screwdriver
- Spudger

VIEW THE GUIDE:
ifixit.com/guide/11755

FIND MORE SCREW MAPS:
ifixit.com/info/screwmmaps