

<p><b>Step 1</b></p> <p>⊕ 2 x 3.6 mm</p>	<p><b>Step 4</b></p> <p>⊕ 1 x 1.7 mm ⊕ 1 x 1.5 mm</p>	<p><b>Step 8</b></p> <p>⊕ 1 x 1.5 mm ⊕ 1 x 1.2 mm</p>	<p><b>Step 13</b></p> <p>⊕ 1 x 2.7 mm ⊕ 1 x 2.6 mm ⊕ 1 x 1.3 mm ⊕ 1 x 1.2 mm</p>	<p><b>Step 18</b></p> <p>⊕ 1 x 1.5 mm</p>
<p><b>Step 20</b></p> <p>⊖ 1 x 4.8 mm</p>	<p><b>Step 22</b></p> <p>⊕ 1 x 2.6 mm</p>	<p><b>Step 23</b></p> <p>⊕ 1 x 2.5 mm ⊕ 1 x 2.4 mm</p> <p>⊖ 1 x 3.6 mm</p>	<p><b>Step 27</b></p> <p>⊕ 2 x 2.4 mm</p>	<p><b>Step 31-34</b></p> <p>⊕ 4 x 1.5 mm</p>

\* Measurements are according to overall screw length.

\* Screw maps are meant to be used only with **iFixit repair guides**.



**IPHONE 4S**  
Display Assembly  
Replacement

**TOOLS**

- iPhone 5-Point Pentalobe Screwdriver
- iPhone SIM Card Eject Tool
- Phillips #00 Screwdriver
- Plastic Opening Tools
- 2.5 mm Flathead Screwdriver

**VIEW THE GUIDE:**  
[ifix.gd/guide7277](http://ifix.gd/guide7277)

**FIND MORE SCREW MAPS:**  
[ifixit.com/info/screwmaps](http://ifixit.com/info/screwmaps)