


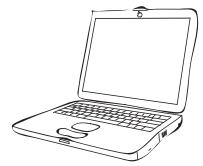













# G3 Lombard Screw Guide

















-    
Heat Shield  
3 Phillips
-    
Modem  
2 Phillips
-    
HD Replacement  
4 T8 Torx
-    
Display  
4 T8 Torx
-    
Upper Case (top)  
5 T8 Torx
-    
Upper Case (top)  
2 T8 Torx
-    
Upper Case (bottom)  
5 T8 Torx



To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.

If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.

Due to model variations, the screws you remove may differ slightly from this guide.

-    
Upper Case (bottom)  
2 T8 Torx
-    
Upper Case (top)  
4 T8 Torx
-    
Power Card  
2 T8 Torx
-    
Framework  
2 T8 Torx
-    
Framework  
1 5mm Standoff
-    
PC Card Cage  
2 Phillips
-    
PC Card Cage  
2 Phillips

